

Spare Parts

PRESTO AQUA LUX

MODEL	PRODUCTS	ORDER CODE	MODEL	PRODUCTS	ORDER CODE	MODEL	PRODUCTS	ORDER CODE
PRESTO AQUA LUX Control Unit		Z1038A002	PR-AQL03 PRESTO AQUA LUX Cartridge		T1002250	PRESTO AQUA LUX Cord (120V)		40010301
PRA-LUX-HP PRESTO AQUA LUX Handpiece		T1002	Handpiece Stand		Z095206	PRESTO AQUA LUX Cord (230V)		U439550
PR-AQL Hose Coupling Hose		Z1050	AC Adaptor PR-AQL		U1044	PTL O-ring Set (Pack of 5)		Y900580

PRESTO AQUA II

MODEL	PRODUCTS	ORDER CODE	MODEL	PRODUCTS	ORDER CODE	MODEL	PRODUCTS	ORDER CODE
PRESTO AQUA II Unit		Z308015	Hose for PRESTO AQUA II		Z308050	PR-AQ03 PRESTO AQUA Cartridge		T816016
PRA-HP PRESTO AQUA Handpiece		T816	QD-J B3 Coupling		T354051			

PRESTO AQUA LUX / PRESTO AQUA II

MODEL	PRODUCTS	ORDER CODE	MODEL	PRODUCTS	ORDER CODE	MODEL	PRODUCTS	ORDER CODE
AFC-40 Foot Control		Z127	Water Filter		U387042	PRA II Bottle O-ring set (Pack of 2)		Y900327
Chuck		T815019	Tube Ring (Includes 2)		Y900077	Bracket Set		Z308060
Secondary Hose for PRESTO (2 m)		Z101240	PRA II Bottle Set		Z308040	Chuck Wrench		C034751
Water Filter Set (water tube x 2, water filter, water filter case)		U387040	PRA II Bottle Lid		Z308041	Bur-inserting Tool		T815030
Water Filter with Case		Y900069	PRA II Bottle		Z308601			

PRESTO II

MODEL	PRODUCTS	ORDER CODE	MODEL	PRODUCTS	ORDER CODE	MODEL	PRODUCTS	ORDER CODE
PRESTO II Unit		Z307015	PR-03 PRESTO Cartridge		T815016	LAB Spanner Wrench		H005751
PR-HP PRESTO Handpiece (Includes 2m hose)		T815	Chuck		T815019	Chuck Wrench		C034751
AFC-40 Foot Control		Z127	Hose for PRESTO (2 m)		T815220	Bur-inserting Tool		T815030
Handpiece Stand		Z010134	Secondary Hose for PRESTO (2 m)		Z101240			

NSK

LUBE FREE LAB AIR TURBINES

PRESTO AQUA LUX
PRESTO AQUA II
PRESTO II

optimum performance & precision

LED

Creating the Perfect Fit with LED Illumination



NAKANISHI INC.	NSK Europe GmbH	NSK United Kingdom Ltd	NSK Oceania Pty Ltd	NSK America Corp	NSK Middle East	NSK Asia
www.nsk-inc.com 700 Shimohinata Kanuma-shi Tochigi 322-8666, Japan TEL : +81 (0)289-64-3380 FAX : +81 (0)289-62-5636	www.nsk-europe.de Elly-Beinhorn-Strasse 8 65760 Eschborn, Germany TEL : +49 (0)6196 77606-0 FAX : +49 (0)6196 77606-29	www.nsk-uk.com Office 5, Gateway1000, Arlington Business Park, Whittle Way, Stevenage, SG1 2FP, UK TEL : +44 (0)1438 310670 FAX : +44 (0)1438 310671	www.nsk-inc.com Unit 22, 198-222 Young St. Waterloo, Sydney, NSW 2017, Australia TEL : +61 (0)2 8306 3000 FAX : +61 (0)2 8306 3030	www.nskamerica.com 700 Cooper Court Schaumburg, IL 60173, USA TEL : +1 888 675 1675 FAX : +1 800 838 9328	www.nsk-inc.com Room 6EA-701, 7th Floor, East Wing No.6 Dubai Airport Free Zone, PO Box 54316 Dubai, UAE TEL : +971 (0)4-204-5507 FAX : +971 (0)4-204-5508	www.nsk-inc.com 1 Maritime Square, #09-33 HarbourFront Centre, Singapore 099253 TEL : +65-6376-5018 FAX : +65-6376-0233

Specifications are subject to change without notice.

REF PR-D473E Ver.2 09.10.00.0



PRESTO AQUA LUX

Lube Free Air Turbine Handpiece with LED and Water Spray

PRESTO AQUA LUX enhanced functionality with LED light has been introduced as part of the new line up of the PRESTO AQUA product range used for a wide range of dental laboratory applications: from precision cutting of high-strength ceramics to working with alumina and zirconia, requiring a water spray coolant.


The PRESTO AQUA LUX with LED is a single device that covers all of the delicate and varied operations in the dental laboratory, assuring high performance and adjustability.

Advantages of using LED

Clearer: LEDs generate natural daylight quality light which assures clearer vision when compared to halogen light.

Durable: LED light sources are longer lasting and more durable than halogen bulb.

Safer: LED light is safer as it generates less heat than a halogen bulb. Natural daylight quality LED light is easy on the eye.

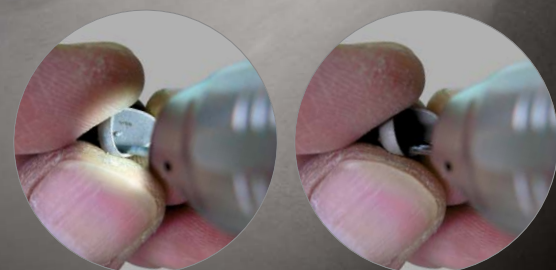

LED light

Non-Optic

LED light enables you to work more efficiently

- Accurate lighting at the point of operation does not hide any detail, allowing you to focus on your work more easily.
- NSK LED is equivalent to daylight: it is easy on the eye, reflecting true coloring.
- LED illuminates fine unevenness and air bubbles of the internal frames which can not be illuminated under the normal bench lighting, thus dramatically improving the quality of internal adjustments.
- Enables fine recontouring effectively.
- Enables precise work and materials assessment under the microscope, which improves efficiency and reduces fatigue.

Easy adjustment of the water coolant spray, LED light and air spray

It is possible to adjust the intensity of the LED, water coolant flow and spray air seamlessly. This adjustability is particularly useful when working with a wide range of materials and allows you to choose the most appropriate setting for your work at any time.




● Adjustment of LED light

It is possible to adjust the LED light in order to prevent light reflection and to set the most appropriate light volume for particular working conditions.

● Water Coolant Options

The water coolant can be seamlessly adjusted from water droplets to a fine water/air mist spray. Both the volume of water and the spray air can be adjusted independently to achieve the ideal working conditions for any material and application: very fine minimal water spray used for preventing micro-cracks to higher volume of water spray used for flushing away debris during cutting.

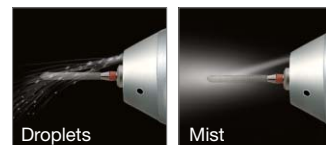

PRESTO AQUA LUX **Optic**

Lube Free Air Turbine Handpiece with LED and Water Spray



MODEL PR-AQL Hose ORDER CODE Z1050
• LED incorporated

MODEL PRA-LUX-HP ORDER CODE T1002

- 320,000 min⁻¹
- Coolant solution spray
- Requires no lubrication
- Swivel twist-free handpiece
- Low noise and vibration
- Unique dust-proof mechanism

MODEL PRESTO AQUA LUX (120V) ORDER CODE Y1001199

MODEL PRESTO AQUA LUX (230V) ORDER CODE Y1001151

- Contents • PRESTO AQUA LUX Control unit • PRESTO AQUA LUX handpiece • PR-AQL Hose
• Foot control (AFC-40) • Secondary hose for PRESTO • Handpiece stand
• PRESTO AQUA LUX Cord (120V/230V) • AC Adaptor

- Simple and easy removal of the water bottle
- Seamless adjustments of LED light intensity, water volume and spray air
- On-Off function of LED light and water coolant spray • Capable of running independently with the incorporated water bottle or connected to mains water supply

PRESTO AQUA II **Non-Optic**

Lube Free Air Turbine Handpiece with Water Spray



MODEL QD-J B3 ORDER CODE T354051
• PRESTO AQUA coupling

MODEL PRA-HP ORDER CODE T816

- 320,000 min⁻¹
- Coolant solution spray
- Requires no lubrication
- Swivel twist-free handpiece
- Low noise and vibration
- Unique dust-proof mechanism

MODEL PRESTO AQUA II ORDER CODE Y150023

- Contents • PRESTO AQUA II unit • PRESTO AQUA handpiece • QD-J B3 coupling
• Hose for PRESTO AQUA II • Foot control (AFC-40) • Secondary hose for PRESTO

- Simple and easy removal of the water bottle
- Seamless adjustments of water volume and spray air • On-off function of water coolant spray
- Capable of running independently with the incorporated water bottle or connected to mains water supply

PRESTO II **Non-Optic**

Lube Free Air Turbine Handpiece



MODEL PR-HP ORDER CODE T815

- 320,000 min⁻¹
- Requires no lubrication
- Low noise and vibration
- Unique dust-proof mechanism
- Lightweight and compact

MODEL PRESTO II ORDER CODE Y150022

- Contents • PRESTO II unit • PRESTO handpiece • Handpiece stand
• Hose for PRESTO • Foot control (AFC-40) • Secondary hose for PRESTO